
Installation Guide

Developed and manufactured by ATP, leaders in ASD pipe flushing solutions.



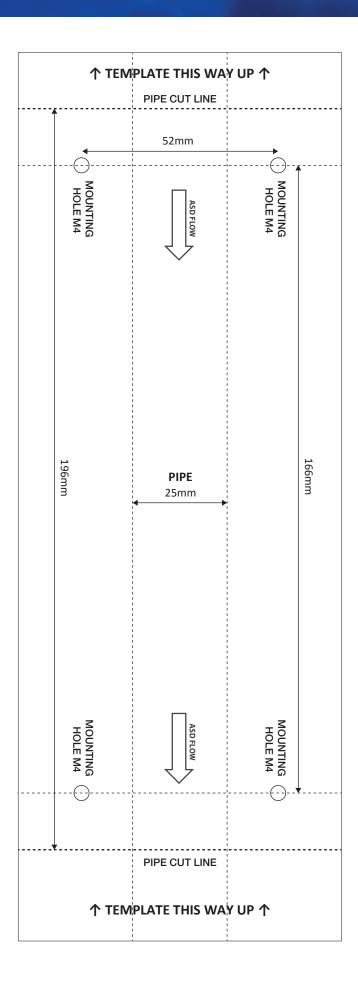

INSTALLATION GUIDE

CAUTION - Prior to fitting this product ensure all ASD pipework beyond the PurgePoint is correctly bonded with the recommended cement glue.

Install the PurgePoint using the template and steps below:

- 1. Place the template under the existing pipework and align with the installation template.
- Mark the wall with the four drilling positions as indicated on the template.
- 3. Mark, cut and remove the ASD pipework section as per the template cut line.
- 4. Prior to drilling ensure the exposed ASD pipework remains dust free.
- 5. Drill the four 5mm holes and fit the PurgePoint as oriented with the fixing anchors provided.
- 6. Glue and re-insert the existing ASD pipework into the Purge Point.

SERVICE & MAINTENANCE GUIDE

CAUTION - Due to operation and use of pressurised air it is advised that the correct eye protection is used.

Follow the steps below to perform pipe cleaning maintenance:

- 1. Unlock the padlock from the lockable handle.
- 2. Rotate in a clockwise direction to the closed position (off).
- 3. Lock the padlock in the closed position (off) to stop the flow of air to the ASD.
- 4. Remove the PurgePoint plug by pressing down on the outer collar.
- 5. I nsert a 12mm push-fit standard air pipe from the air / nitrogen supply.
- 6. Purge the pipe with clean air or nitrogen to a maximum of 4Bar/60psi.
- 7. When completed, remove the purge pipe.
- 8. Re-insert the PurgePoint plug.
- 9. Unlock the padlock in the closed position (off).
- Rotate in a counter-clockwise direction to the open position (on).
- 11. Lock the padlock to the lockable handle.

NOTE - Padlock and 12mm purge pipe is not provided.



Rivervale WA 6103